

AUDIO — audio selection menu
AUDIO long — Dolby/DTS downmix control
TV/RADIO — switch between TV and RADIO mode
 Long keypress switches to Radio mode
MUTE — mute the audio

TTX — teletext service or text entry menu
HD — set temporary video mode (note 2)
HD long — HDMI CEC setup (note 2.5)
PAGE DOWN — down the page in lists

FAV — show favorite services from bouquets
FAV long — EPG for current channel
0 — recall last viewed channel
SAT — show available satellites
SAT long — assignable

UP — show channels and position on previous one
DOWN — show channels and position on next
LEFT — switch/zap to lower channel
RIGHT — switch/zap to upper channel
 All of them — navigate through options
OK — confirm selection / show channel status
OK x 2 — show extended channel info



POWER — switch on and off stand by mode
POWER long — show power state menu (note 1)

SUBT — select subtitles if available
V SIZE — select video scaling
V SIZE long — EMU info
PAGE UP — up the page in lists

0–9 — direct channel selection or SMS like text entry

MENU — main menu or plugin menu if available
I (INFO) — event info
I x 2 — search EPG or IMDb details

EXIT — exit menu or hide info messages
EPG — multiple channel EPG info
EPG long — options for EPG channel info

RED — EPG for current channel
GREEN — timer overview
GREEN long — Automagical timer (note 4)
YELLOW — EPG search
YELLOW long — IMDb details
BLUE — show extensions
BLUE long — PowerBoard Center
 All of them — actions in menus

TIMER — editor for timers/recordings

TIMER long — Auto Timer (note 4)

MEDIA — Media Player2 with subtitle support (note 5)

MEDIA long — Scan media

REC LIST — show recordings or movies

REC LIST long — DreamPlex (note 6)

PREVIOUS — previous entry or zap to previous channel in history or move left in text entry fields

REWIND — backward skip, subservice previous

FORWARD - forward skip, subservice next

NEXT - next entry or zap to next channel in history or move right in text entry fields

Notes:

1 — POWER: action is adjustable in Menu>Setup>System>Button Setup

2 — HD: useful for fine, temporary video playback adjustment, especially for SD (576i live or MP4/AVI movies playback). Available video modes (like 24p, 25p etc.) depend on your TV capabilities. Resulting picture quality is related to the quality of your STB and TV scalars, as one may do a better job than other.

2.5 — HDMI CEC: not all TVs support this feature. Please check your TV manual and <http://en.wikipedia.org/wiki/HDMI#CEC>

3 — USB: Temporary eject, use USB long for permanent removal of USB media device.

4 — Auto Timer: press MENU or check PB manuals for additional info

5 — Media Player2: Menu for options, while playing press TTX do download subtitles from various sources

6 — DreamPlex: press MENU or check <https://github.com/DonDavici/DreamPlex/wiki> for additional info



VOL plus — increase sound volume

VOL minus — decrease sound volume

LIST — list of recordings

LIST long — DreamPlex Plugin (note 6)

RECALL — zap through recent channel history

PORTAL — Browse Plugins

PORTAL long — Media Portal (if installed)

CH plus — zap to upper channel

CH minus — zap to lower channel

PLAY — start playback or start time shift

PAUSE — pause playback or start timeshift

STOP — stop playback or timeshift stop

RECORD — recording menu

OPT — show help

OPT long — PowerBoard EMU manager

SLEEP — sleep timer configuration

SLEEP long — restart active (or sleepy) EMU

USB — safely remove USB device (note 3)

USB long — remove USB media via PowerBoard device manager (for permanent removal)

DELAY — audio sync

DELAY long — setup audio sync options

